


# TURTLE

## 100M USB 3.2 5GBPS EXTENDER KIT

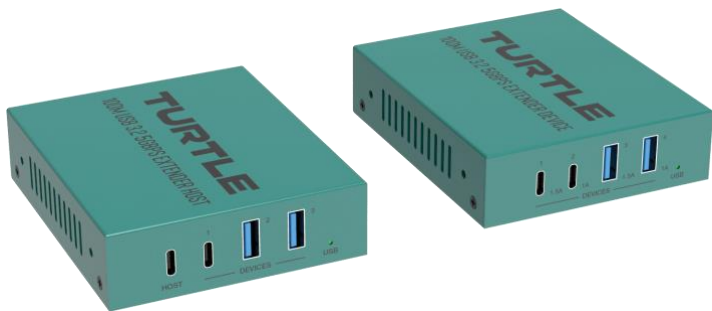

### User Manual

VER 1.0

## Thank you for purchasing TURTLE product


For optimum performance and safety, please read these instructions carefully before connecting, operating or adjusting this product. Please keep this manual for future reference.

## Surge protection device recommended

This product contains sensitive electrical components that may be damaged by electrical spikes, surges, electric shock, lighting strikes, etc. Use of surge protection systems is highly recommended in order to protect and extend the life of your equipment.

## Caution

The product requires the use of UTP connectors. Please connect in direct interconnection method and do not cross connect.

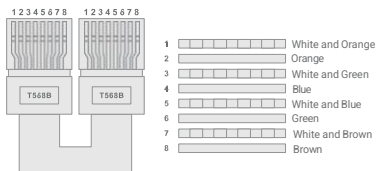

Direct Interconnection Method

## Table of Contents

1. Introduction.....	1
2. Features.....	1
3. Package Contents.....	1
4. Specifications.....	2
5. Operation Controls and Functions.....	3
5.1 Transmitter Panel.....	3
5.2 Receiver Panel.....	4
6. Application Example.....	5

## 1. Introduction

The Turtle AV USB Extender Kit delivers high-speed USB 3.2 performance over distances up to 100 Metres / 328 Feet using a single CAT cable, with data rates up to 5Gbps. Plug-and-play simplicity, universal device compatibility, and reliable low-latency performance make it the perfect solution for professional AV, conferencing, and live production environments.

## 2. Features

- Extension of USB 3.2 Gen 1 up to 100m/328ft via CAT6a cable
- USB 3.2 Gen 1 connectivity with data transfer rate up to 5Gbps
- Backwards compatible with USB 2.0 and 1.1
- Hardware acceleration for isochronous and bulk transfer
- TX features 1x USB-Chost port, 1x USB-C and 2x USB-A device ports
- RX features 2x USB-C (1x 5V@1A and 1x 5V@1.5A) and 2x USB-A device ports (1x 5V@1A and 1x 5V@1.5A)
- Support firmware upgrade via USB-C service port
- Support FSYNC GPIO pass-through for industry camera use
- Support bi-directional 24V PoC (Power over Cable), when TX or RX gets power, the other end does not need an external power supply
- Plug-and-play with no drivers, downloads, or software required

## 3. Package Contents


- 1x USB 3.2 Gen 1 Extender (Transmitter)
- 1x USB 3.2 Gen 1 Extender (Receiver)
- 1x 24V/3.75A Locking Power Supply
- 2x 4pin-3.5mm Phoenix Connector (Male)
- 4x Mounting Ear
- 8x Machine Screw (KM3\*4)

## 4. Specifications

Technical	
USB Protocol	USB 3.2 Gen 1
Transmission Rate	Up to 5Gbps
Transmission Distance	100m/328ft via CAT6a (F/FTP) cable 1.5m/4.9ft via USB cable
ESD Protection	IEC 61000-4-2: ±8kV (Air-gap discharge), ±4kV (Contact discharge)
Connections	
Transmitter	Input: 1 × HOST [USB Type C, 24-pin female] Output: 1 × USB-C DEVICE [USB Type C, 24-pin female] 2 × USB-A DEVICE [USB Type A, 9-pin female] 1 × HDBT-USB3 [RJ45 connector, 24V PoC] Control: 1 × RS-232 [ 3pin-3.5mm phoenix connector] 1 × FSYNC [ 1pin-3.5mm phoenix connector] 1 × SERVICE [USB Type C, firmware update port]
Receiver	Input: 1 × HDBT-USB3 [RJ45 connector, 24V PoC] Output: 2 × USB-A DEVICE [USB Type A, 9-pin female] 2 × USB-C DEVICE [USB Type C, 24-pin female] Control: 1 × RS-232 [ 3pin-3.5mm phoenix connector] 1 × FSYNC [ 1pin-3.5mm phoenix connector] 1 × SERVICE [USB Type C, firmware update port]
Mechanical	
Housing	Metal Enclosure
Color	Turtle Aqua
Dimensions	TX / RX: 100mm [W] × 85mm [D] × 25.5mm [H]
Weight	TX: 265g; RX: 275g
Power Supply	Input: AC 100~240V 50/60Hz Output: DC 24V/3.75A
Power Consumption	TX: 23W (Max); RX: 35W (Max); TX+RX: 68W (Max, including line loss)
Operating Temperature	0°C ~ 40°C / 32°F ~ 104°F
Storage Temperature	-20°C ~ 60°C / -4°F ~ 140°F
Operating Humidity	20%~80% relative humidity, non-condensing
Storage Humidity	10%~90% relative humidity, non-condensing


## 5. Operation Controls and Functions

### 5.1 Transmitter Panel

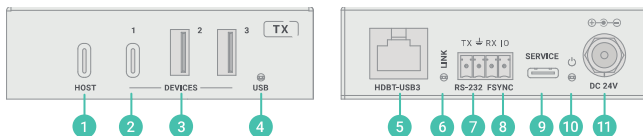

No.	Name	Function Description
1	HOST	Uplink USB-C port, connected to PC or host. It can be used for HUB firmware update.
2	USB DEVICES (1)	Downlink USB-C port, connected to USB devices such as U disk or hard disk. Its output power is up to 5V/1A.
3	USB DEVICES (2~3)	Downlink USB-A port, connected to USB devices such as U disk or hard disk. Its output power is up to 5V/1A.
4	USB LED	USB signal indicator. ▪ On: USB 3.0 signal is detected. ▪ Blinking: USB 2.0 signal is detected. ▪ Off: USB signal is not detected.
5	HDBT-USB3	Connects to the HDBT-USB3 port on Receiver with CAT6a cable. It can also be used for 24V PoC power supply.
6	LINK LED	Connection signal indicator. ▪ On: Transmitter and Receiver are connected and linked. ▪ Off: Transmitter and Receiver are not connected.
7	RS-232	3pin phoenix connector, connected to a PC or control system for RS-232 command pass-through.
8	FSYNC	FSYNC port, the level pass through from Transmitter to Receiver, to synchronize the external devices. Default level range is 0~5V.
9	SERVICE	USB-C port for firmware update, supporting USB 2.0.
10	Power LED	The LED will be on when the transmitter is powered on.
11	DC 24V	DC 24V/3.75A power input port.

## 5.2 Receiver Panel

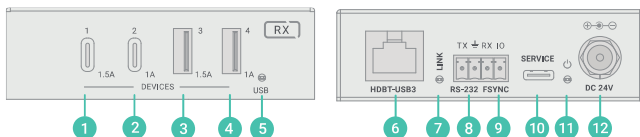

No.	Name	Function Description
1	<b>USB DEVICES 1</b>	Downlink USB-C port, connected to USB devices such as U disk or hard disk. Its output power is up to 5V/1.5A.
2	<b>USB DEVICES 2</b>	Downlink USB-C port, connected to USB devices such as U disk or hard disk. Its output power is up to 5V/1A.
3	<b>USB DEVICES 3</b>	Downlink USB-A port, connected to USB devices such as U disk or hard disk. Its output power is up to 5V/1.5A.
4	<b>USB DEVICES 4</b>	Downlink USB-A port, connected to USB devices such as U disk or hard disk. Its output power is up to 5V/1A.
5	<b>USB LED</b>	USB signal indicator. <ul style="list-style-type: none"> <li>▪ On: USB 3.0 signal is detected.</li> <li>▪ Blinking: USB 2.0 signal is detected.</li> <li>▪ Off: USB signal is not detected.</li> </ul>
6	<b>HDBT-USB3</b>	Connects to the HDBT-USB3 port on Transmitter with CAT6a cable. It can also be used for 24V PoC power supply.
7	<b>LINK LED</b>	Connection signal indicator. <ul style="list-style-type: none"> <li>▪ On: Transmitter and Receiver are connected and linked.</li> <li>▪ Off: Transmitter and Receiver are not connected.</li> </ul>
8	<b>RS-232</b>	3pin phoenix connector, connected to a PC or control system for RS-232 command pass-through.
9	<b>FSYNC</b>	FSYNC port, the level pass through from Transmitter to Receiver, to synchronize the external devices. Default level range is 0~5V.
10	<b>SERVICE</b>	USB-C port for firmware update, supporting USB 2.0.
11	<b>Power LED</b>	The LED will be on when the receiver is powered on.
12	<b>DC 24V</b>	DC 24V/3.75A power input port.

## 6. Application Example

